




MULTI-FOCAL USB ENDOSCOPE USER GUIDE

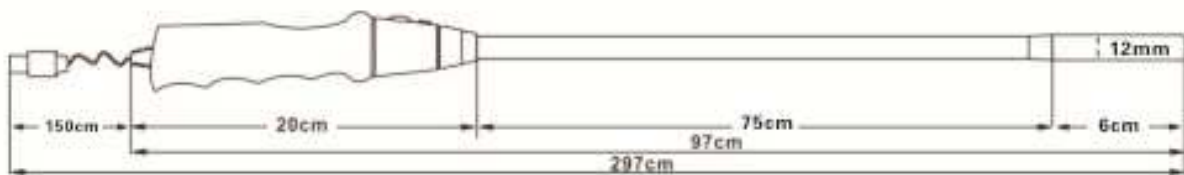

- 1. Multi-focal for 700 times Magnification
 - 2. Handheld USB Endoscope, Flexible Cable
 - 3. Snapshot Button, with a gradual magnification circle from 0 to 700X
 - 4. Adjustable LED Lighting Wheel
- Carry Case contents:
USB Endoscope, CD Disk






A handy pipeline inspection device helps you search inside hard to reach places.

SPECIFICATIONS:

PE covered cable with ABS handler
 Flexible cable Neck: 75cm long
 Camera head outer diameter is 12mm
 Image Resolution: 640*480 pixels
 Focal distance: 6cm - infinite
 Snapshot & LED lighting adjustable
 Waterproof camera head with adjustable white LED lighting

Flexible cable Neck with handler: 97 cm long
 Flexible cable neck diameter: 6.8mm
 USB cable: 150 cm / USB 2.0 interface
 Lens: F#:2.8 view of angle: 54°
 Frame rate up to 30fps@VGA resolution

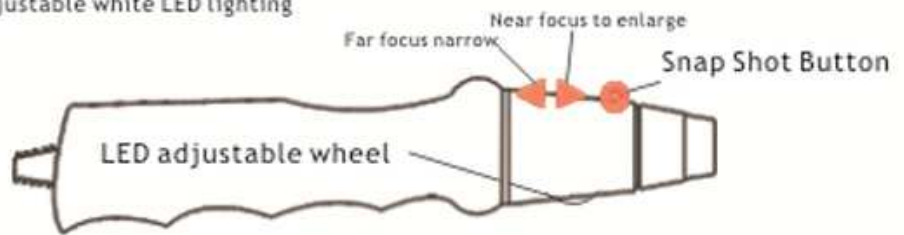

Installing the Software:

- 1.Run the application VideoCap.exe in the disk (please copy the file to your computer for future use)
- 2.Select the video capture source 'USB Endoscope' from the 'Device' menu. This is not needed if you only have one source. Make sure the 'Preview' mode is enabled in the 'Option' menu.

How to adjust focal:

Press the UP arrow button to get a closer focal and Down arrow button for further focal; Press and Hold the UP arrow button to have a gradual magnification cycle from 0 to 500x.; Move the camera slightly forward or backward from the object to get the most clear view for the chosen focal.

How to take still picture:

If this is your very first capture, select 'Set Snapshot File Folder' from File menu to configure the folder where the pictures will be stored. A browser window will open, select a desired folder and click 'OK'. Now all the taken pictures will be stored in the folder you selected. Press shutter button on the handle of endoscope to take picture, you can now take as many pictures as you wish just by pressing the shutter button.

How to capture and save video:

If this is your very first capture, select 'Set Capture File Folder' from File menu to configure the folder where the video will be stored. A browser window will show, select a desired folder and click 'OK'. Now all the video will be stored in the folder you selected.

Click 'Capture' > 'Start Capture' to start the video capture, to stop the video capture click the 'Capture' > 'Stop Capture'. The video will be saved in AVI format in the folder you selected.

You can configure the video property (e.g. brightness) from 'Video Capture Filter' in the 'Option' menu.



WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

